


Plug this end into  
your gaming  
device.

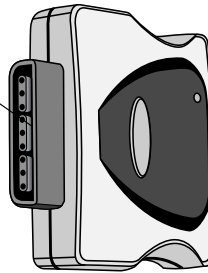

Plug this end into  
your computer's  
USB port.

Thank you for purchasing the RadioShack Playstation to USB Adapter. It connects a Sony Playstation (PS) controller to your personal computer through the USB connection so you can use it with PC game software requiring a steering wheel, joystick, or joystick.

- The adapter uses 4 axes, 12 buttons, and 1 POV to support the four Playstation modes — Digital, Analog, Analog Joystick, and Negcon controller.
- It supports the controller's plug-and-play capability and manual adjusting modes.
- You can use the adapter with various PS and PS2 controllers, including the Sony standard game pad.
- The adapter requires no calibration and complies with USB specification V1.1 and USB HID specification V1.0.

## SYSTEM REQUIREMENTS

- IBM PC586 or Pentium compatible.
- Computer with a USB port or USB hub.
- Microsoft Windows 98, 98SE, 2000, ME, or XP
- Direct-X7.0a or later

## INSTALLATION

1. Plug the game adapter's USB plug into the computer's USB port or USB hub. The *Add New Hardware Wizard* dialog box appears on the screen.
2. Click **Next**. Follow the on-screen instructions to install the game adapter. The game adapter's indicator lights when installation is complete. ✓

3. Insert the supplied driver disk.
4. Go to Windows Explorer and select your disk drive. Double-click **Setup** and follow the on-screen instructions.
5. Connect the PS game controller to the game adapter. You're ready to play! ✓
6. To verify the game adapter is installed, double click the Game Controllers icon in the Control Panel. The *Game Controllers* dialog box appears.
7. To verify all the game functions, click **Properties** in the *Game Controllers* dialog box.
8. When finished click **OK**.

## FCC DECLARATION OF CONFORMITY

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product:	Playstation to USB Adapter
Model:	26-304
Responsible Party:	RadioShack 100 Throckmorton Fort Worth, TX 76102
Phone:	817-415-3200

### NOTE

- You may be prompted to insert the Windows operating system CD during installation.
- Verify that your operating system has Direct-X7.0a or later. If not, download the file from Microsoft's website at [www.microsoft.com](http://www.microsoft.com).
- Your game adapter's driver incorporates Vibration Feedback. Not all the game player drivers have this function. To detect if your game player has this function or not, check the game player's package or owner's manual for words such as "Vibration Feed Back" or "Force Feed Back".

### ! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

⚠ — Warning    ! — Important    ✓ — Note    ⚡ — Caution    💡 — Hint



## THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the *FCC Rules*. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your adapter.

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99